

How to Install and Maintain Swan Neck/Bubbler

Step 1

Tools You Will Need

Philips and flat head screwdriver
Adjustable Pliers
Adjustable Spanner



Step 2

Types Of Water Isolation

Different ways of connection to 15mm diameter water supply pipe



Step 3

Isolation of power



Step 4

Isolation of Water

This can be done either at the incline tap shown or at source as shown in Step 2



Step 5

New Taps

Remove plastic fitting and brass nut prior to fitting
Note... rubber washer goes above sink top when fitting tap.



Step 6

Release Water Pressure

After turning off supply after isolation of water release pressure via tap.
This will enable more easier removal of pipes underneath.



Step 7


Remove (Flat Screen) Top of Waste

This screen holds the waste to the sink base and is removed to allow sink top to pivot up and expose supply pipes to taps. See Step 10



Step 8

Remove 4 x Phillips Screws (sides)

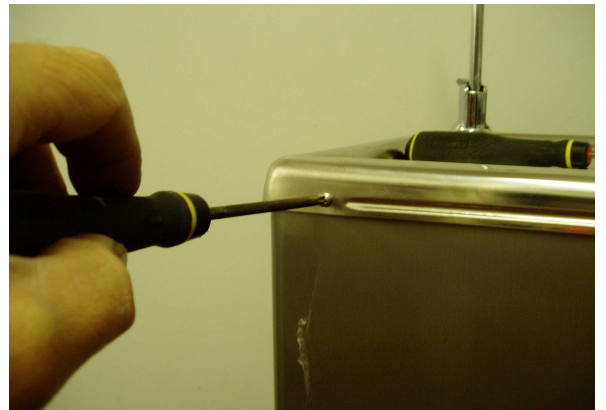

Step 9

Lift Top To Expose 2 x Supply Pipes To Tapes



Step 10

Remove By Push/Pull Action Insuring The Collet At The Base of The Tap is Pulled Up

This procedure can be tricky as shown in picture pull upward the small collet at base of fitting whilst holding up the collet give a push/pull action to remove




Step 11

Once Top is Free From Cooler Remove Pipe Fitting Base of Tap



Step 12

Remove Brass Lock Nut and Remove Tap

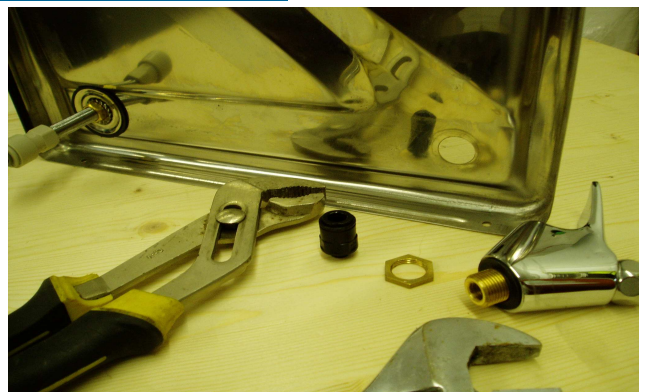

Reverse procedure to refit. Ensure supply pipes are pushed fully into fitting before water is restored to avoid leaks.